

CANDLE LIGHTER Model MJ-250





Made in Taiwar



(H) 178 mm (7 in) (L) 70.5 mm (2.8 in) (W) 30 mm (1.2 in) Length of Nozzle: 155 mm (6.1 in)	244g	Butane	35 minutes	
Body Measurements	Weight (with butane)	Fuel	Hours of nonstop burning	

INSTRUCTIONS TO OPERATE:

MJ-250 Candle Lighter SPECIFICATIONS:

- TO OPERATE:

 1) Depress safety lock (A) and while depressed pull back ignition switch (B) all the way toward the base. (C)

 2) Release ignition switch (B) to extinguish flame and stop fuel flow.

 3) To use LED light, depress button on top of tool

 TO REFILL WITH BUTANE FUEL:

 1) Use only a reliable grade



butane fuel to refill. Use of other than a good grade Butane Fuel may result in damage to filling valve and could clog the nozzle.

2) Always refill in upside down position. (Fig D)

3) Place butane fuel nozzle into filling valve and depress several times with a firm even pressure. Do not overfill.

4) Do not refill near open flame or sources of heat and/or sparks.

sparks. WARNINGS:

- **MARNINGS:

 *Read instructions before use.

 **Do not ignite or use near an open flame, heater, furnace, or combustible material.

 **Do not touch the nozzle cover during use, or before sufficient time has passed for cooling.

 **Always be sure the unit is cool, before storing.

 **Store properly when not in use, keep in a dry place, out of the reach of children.

 **Do not use continuously for more than five(5) minutes.

 **CAUTION: The torch flame is almost invisible in daylight, or in strong light.





